

# Setup: Bluetooth Cell and iPod



Phone Bluetooths to  
Autocom Receiver




Part #1273 or Part #1276

AUX1



Part #1307 comes in every Autocom Kit.  
If the iPod is bike powered, use Part #1314

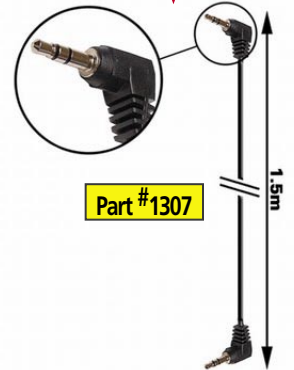

Part #1307

AUX2

Your Autocom must have AUX1 power enabled to use Part #1273, otherwise use Part #1276. Please call 888-851-4327 with any questions.



View more sample configurations and also download instructions for connecting the Zumo 550 to your Autocom at [www.autocomamerica.com](http://www.autocomamerica.com)

This is only one example of an Autocom configuration. Each individual motorcyclist will configure their Autocom system to the way they want to ride. If you would like help configuring your Autocom system please call 888-851-4327 to speak with a TopGear Representative.