

Helmet Fitting Guide


Arai-Style Helmet — Separate Removable Cheek Pads

The fabric is either taped or elasticated over the polystyrene and so it is easy to install the speakers behind the lining.



Note that the wire should come out of the speaker towards the back of the helmet with the speakers in a horizontal position. It is recommended that you use smooth velcro to secure the speakers to the polystyrene.

When replacing the cheek pads, trap the boom between the outer shell and the inner cheek pad taking care not to cut the speaker wire with the cheek pads plastic tongue if it has one.

It is recommended that you tape the boom and loom to the inside of the outer shell. **DO NOT MODIFY THE HELMET**

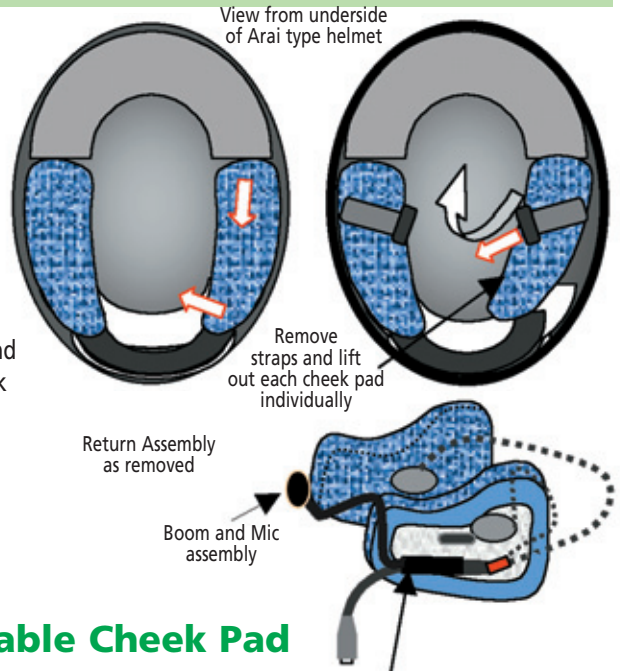

Shoei-Style Helmet - One Piece Removable Cheek Pad

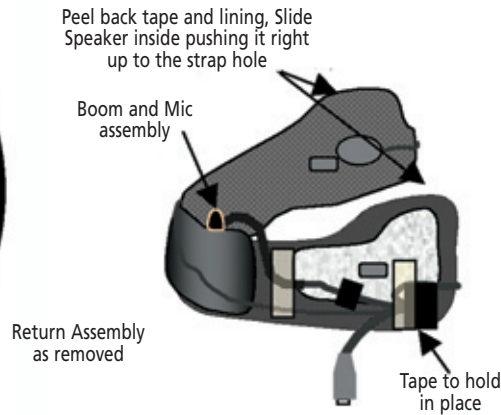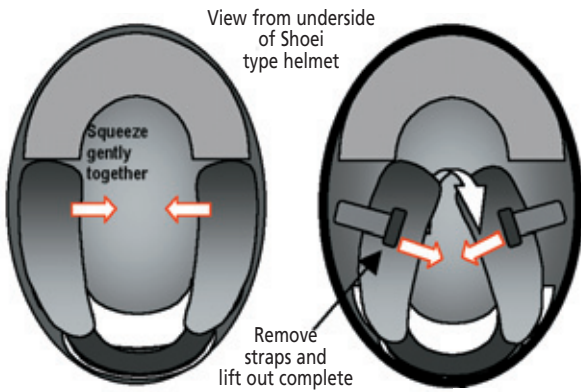

BMW System 4 Helmet

Remove neck collar by pulling the back of the collar away from the helmet and sliding both side guides out from their retaining locators. Detach velcro-ed flaps (Marked 'A' below) to expose the EPS ear cups.

Thread boom (microphone first) under the chin strap but over the opened velcro flaps (A).

Locate speakers just below the polystyrene ear indents under the velcroed flaps (B). Neatly tuck speaker cable under lining around the back of the helmet and below the neck collar retaining groove, out of sight (C).

Position headset lead along the outer edge of the helmet under the velcroed flap. This may require addition velcro to secure. Close the velcroed flaps and tidy.

Push the thin section of boom into the joint between the skull and cheek lining, under the chin strap. Locate the boom across the top of left hand cheek pad forming it to follow it's contours. Hold boom down firmly and secure in place with velcro or a suitable sticky backed material (D).

Form boom so that microphone is situated in-front of and just touching the centre of your mouth.

Check that down lead and boom are well secured and wires are tidily tucked away. CAREFULLY check the opening and closing of the front of the helmet does not snag the boom or down lead.

Test the headset and reposition the microphone and speakers as required. Refit collar. Note that due to the helmet design, speaker positioning options are limited. As such it may not be possible to position the speakers directly in line with your ears. If this is the case one cannot expect the sound to be good when using earplugs.

